

GPS NAVIGATOR

User Manual

FCC

CE


RoHS



EAC

Android Version No.: 01



About this user manual

 
 
 
This user manual is specially designed to detail the device's functions and features.

- Please read this manual before using the device to ensure safe and proper use.
- Descriptions are based on the device's default settings.
- Factory continuously strives to improve its products. Due to software upgrading, some contents in this user manual may be different from your product. Factory reserves the rights to revise this user manual or withdraw it at any time without prior notice. Please take your product as standard.

1. What's in the box?


Inside your package

- | | |
|-----------------|---------------|
| - GPS | - Bracket |
| - Car charger | - USB cable |
| - Suction Mount | - User Manual |

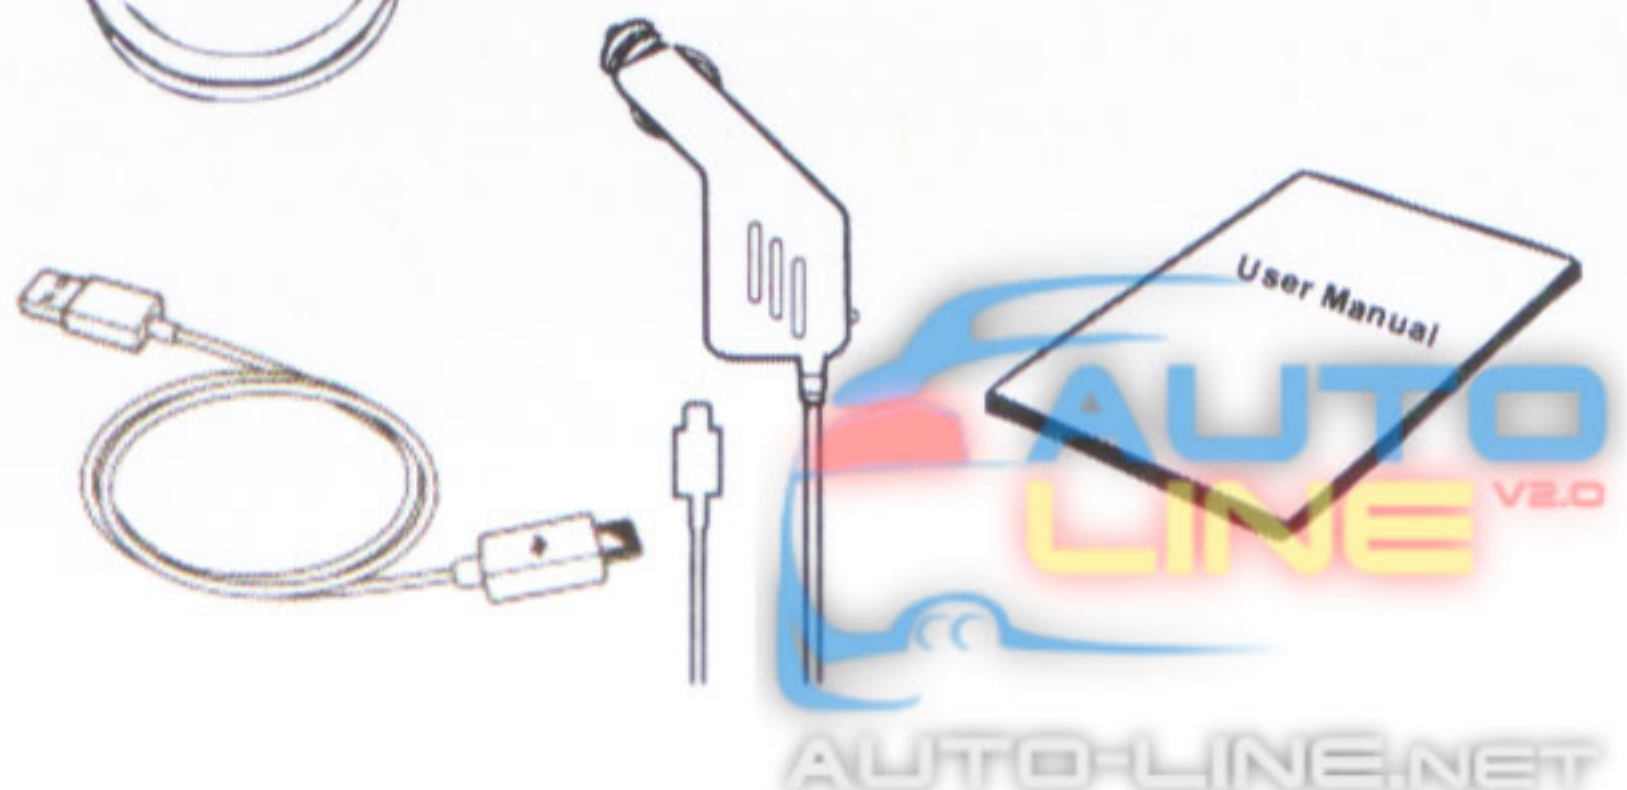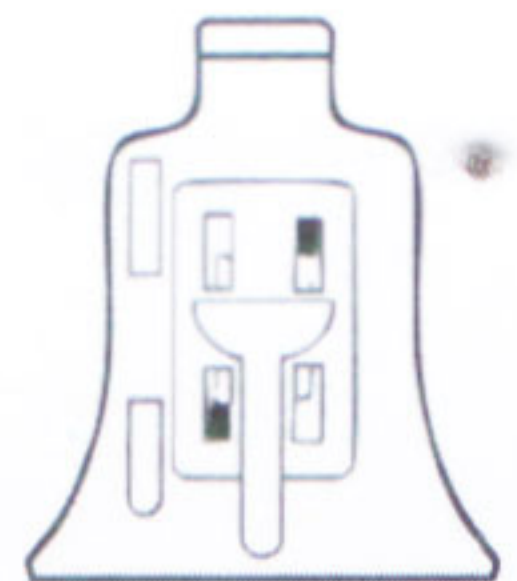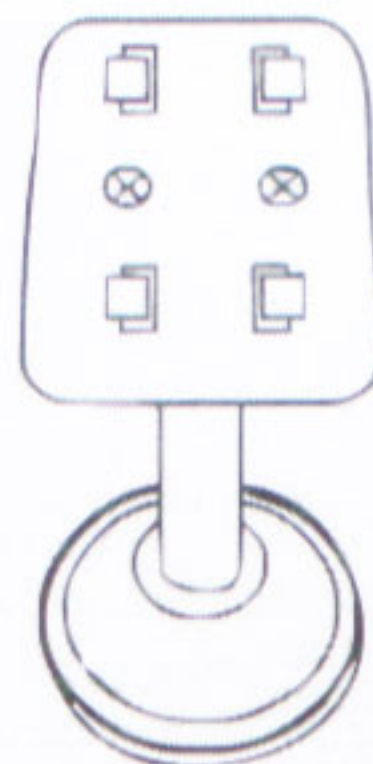

Mount your device

 1. Install the bracket to mounting holder.
2. Remove the protection plastic film from the suction cup, and position it on the clean windshield.
3. Hold firmly against the surface and lock the suction cup lever. The mount will suction and stick firmly onto the surface.
4. Lock device on the bracket with bottom on the appropriate socket
5. Rotate the knob to adjust device to desired viewing angle.

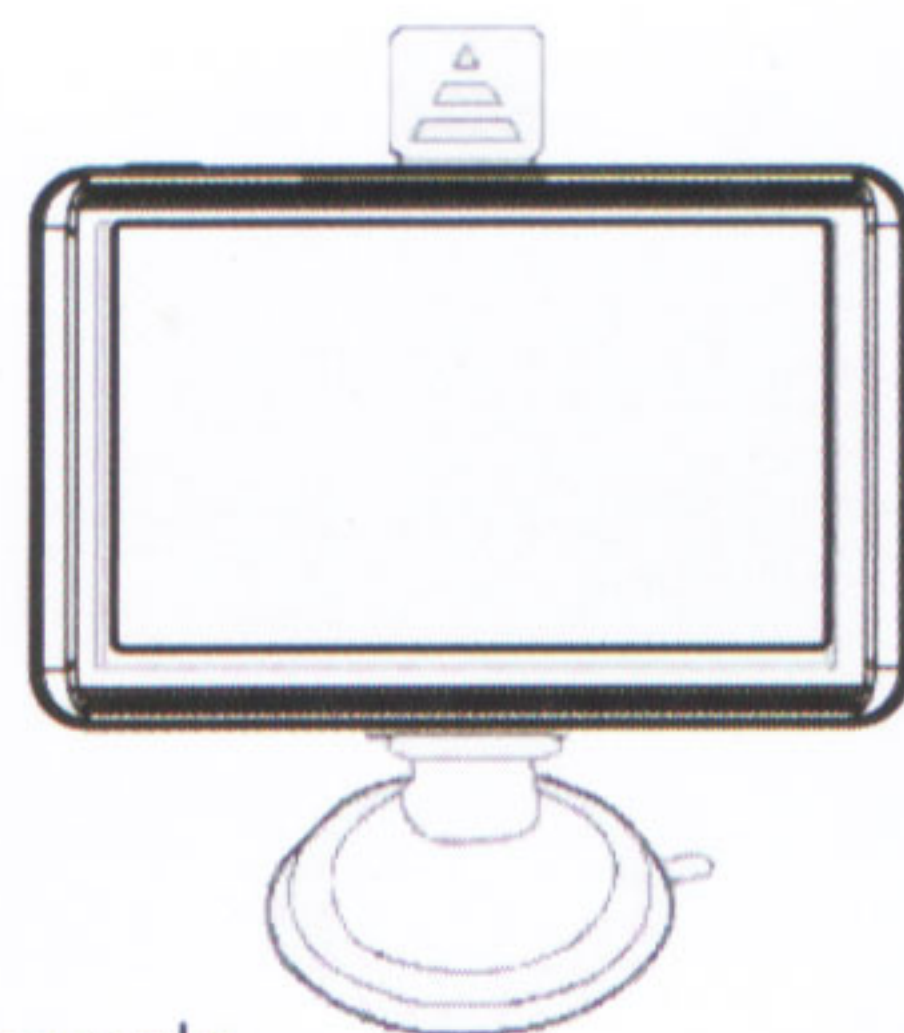


Note: Make sure that the device has a clear view of sky to attain best GPS reception.

Dismount your device

1. Push the tap on top of the mounting cradle to release the device
2. Lift the suction cup lever to easily remove the suction cup from windshield.

Charge the battery

 Using the car charger: after vehicle engine is started, charge the device through vehicle 12v cigarette lighter, to protect the device from sudden surges in current.

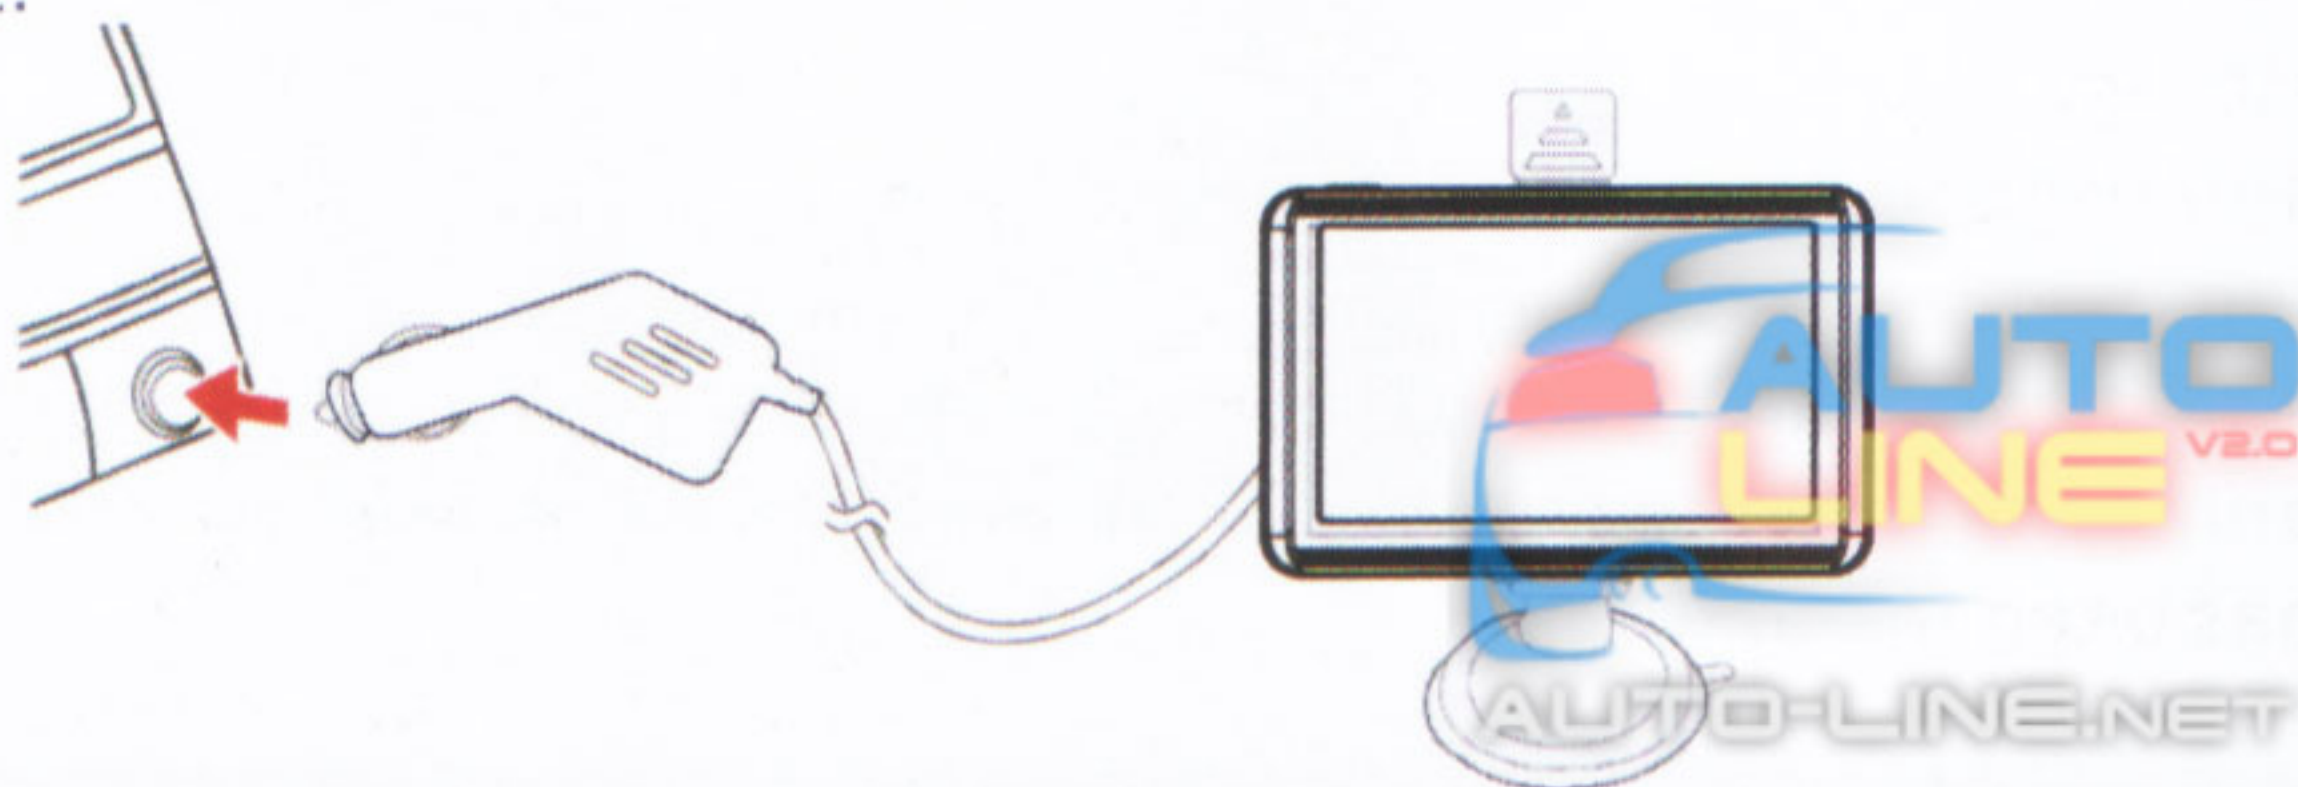

Device overview

 
1 






2 

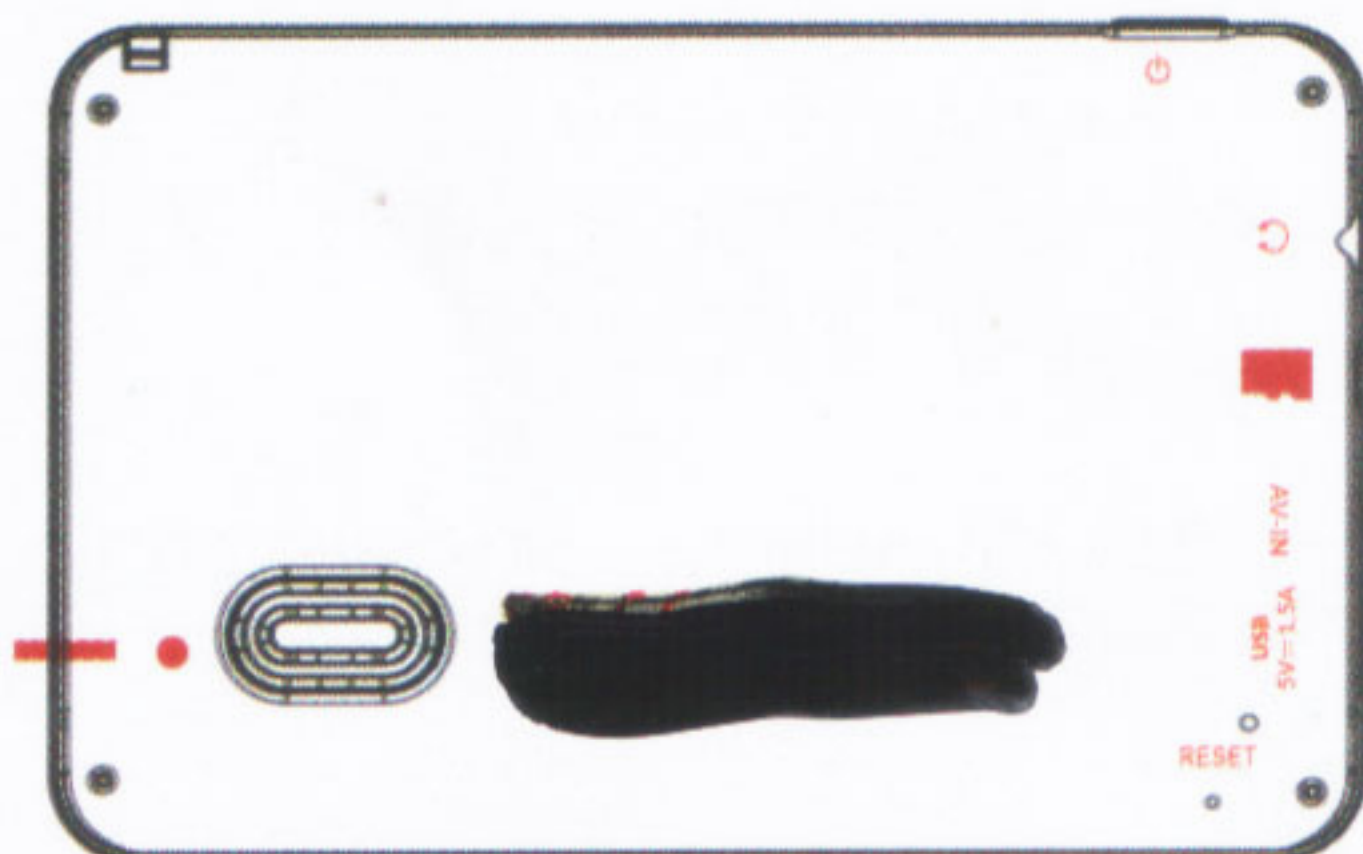

1. Power Button
2. LED Light Indicator
3. Earphone Jack
4. MicroSD Card Slot
5. AVIN
6. Mini USB Port
7. Reset Button
8. Speaker

8 



-  3
-  MicroSD 4
-  AVIN 5
-  6
-  RESET 7

*Note: * Please fully charge the battery (for at least 8 hours) before initial use.*

** The battery status indicator glows in red color when charging, and turns green color when charging is complete.*

** Charging time is approximately 2 hours after initial use.*

 
** It is not necessary to start charging the device before the battery is fully discharged.*

Power on your device

Press and hold the power button to turn on your device.

To turn it off, press and hold the power button, and then tap power off icon on the pop-up screen.

User Interface

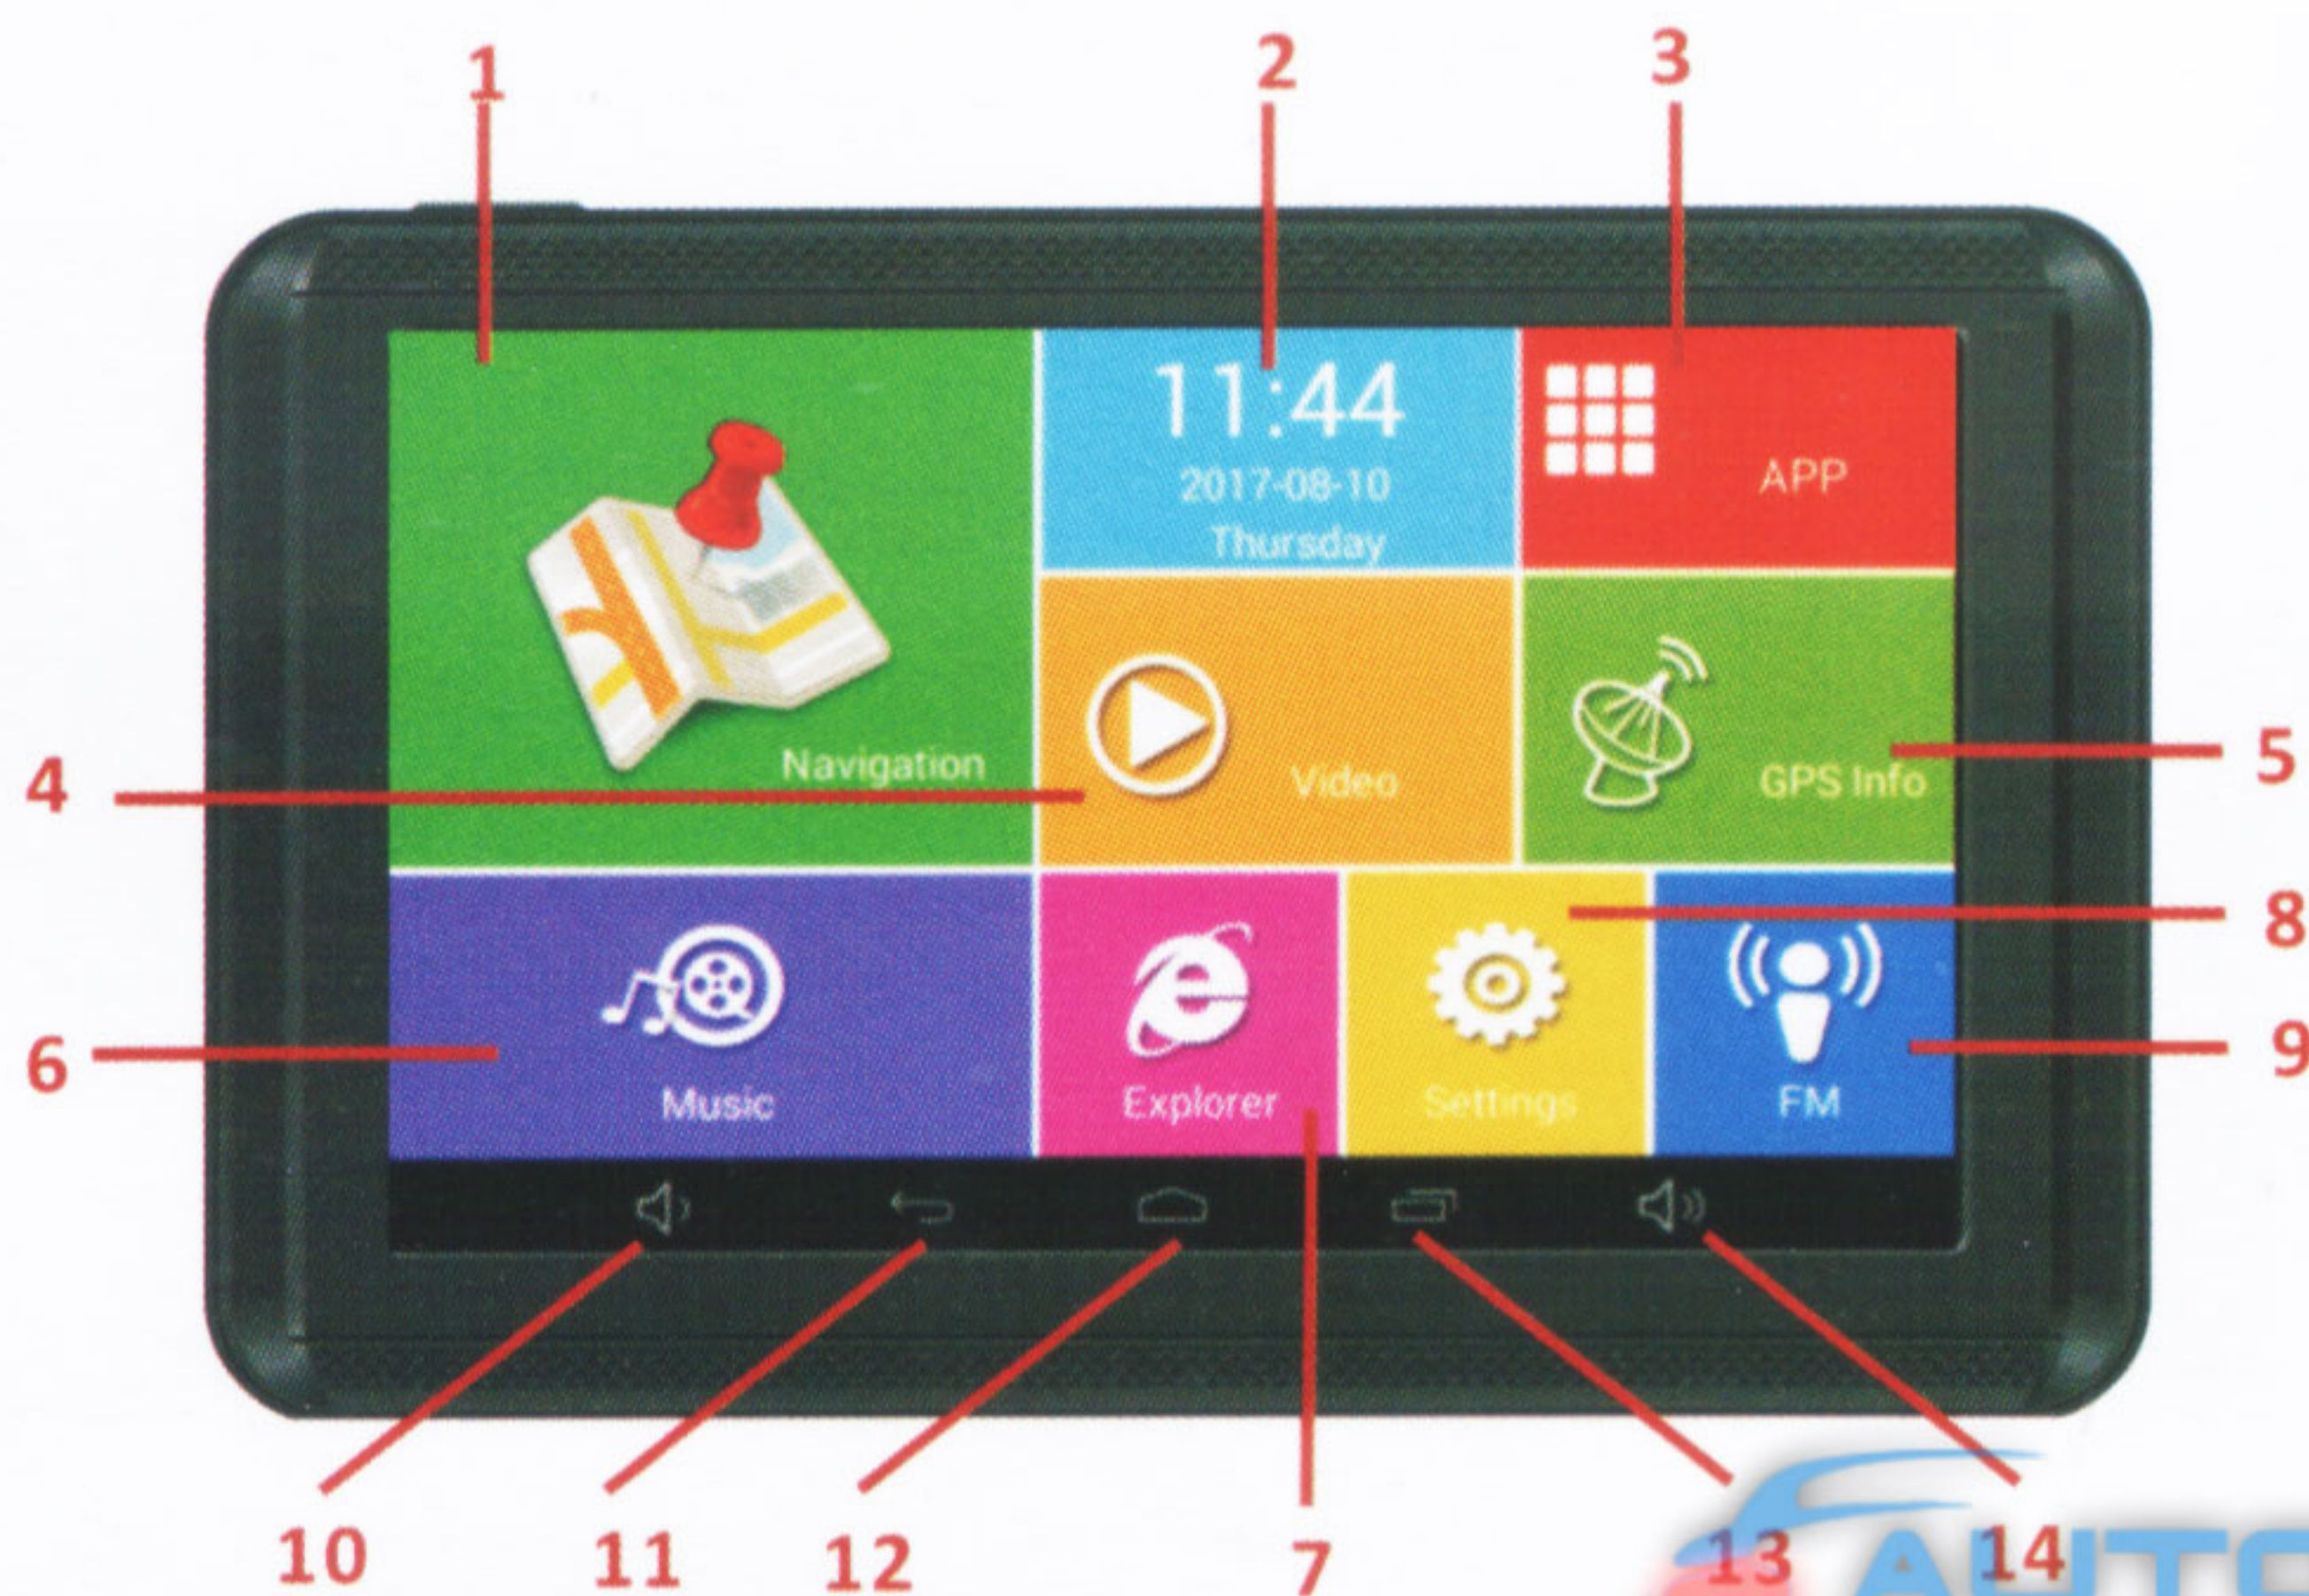


1	Navigation	Tapping on the button view or opens navigator programs
2	Time	The indicator shows the time and date
3	APP	Tapping on the button to view apps installed
4	Video	Tapping on the button opens player to play video files in memory.
5	GPS Info	Tapping on the button opens GPS satellites information menu
6	Music	Tapping on the button opens player to play WMA9 and WAV files in memory
7	Explorer	Taping on the button to visit website
8	Setting	Tapping on the button opens setting menu of storage, display brightness, Language, USB data statue, etc.
9	FM Transmitter	Tapping on the button opens menu to set the FM transmitter frequency.
10	Volume	Volume down
11	Back	Tapping on the button to return previous menu
12	Home	Tapping on the button to be home
13	Background APP	Tapping on the button to view apps currently running
14	Volume	Volume up

GPS Information

Tap the "GPS Info" button on the home screen to enter the GPS information screen, as shown in the following figure.

 
* To receive satellites signal and position as the right picture. The GPS should be at outside with a clear view of the sky.

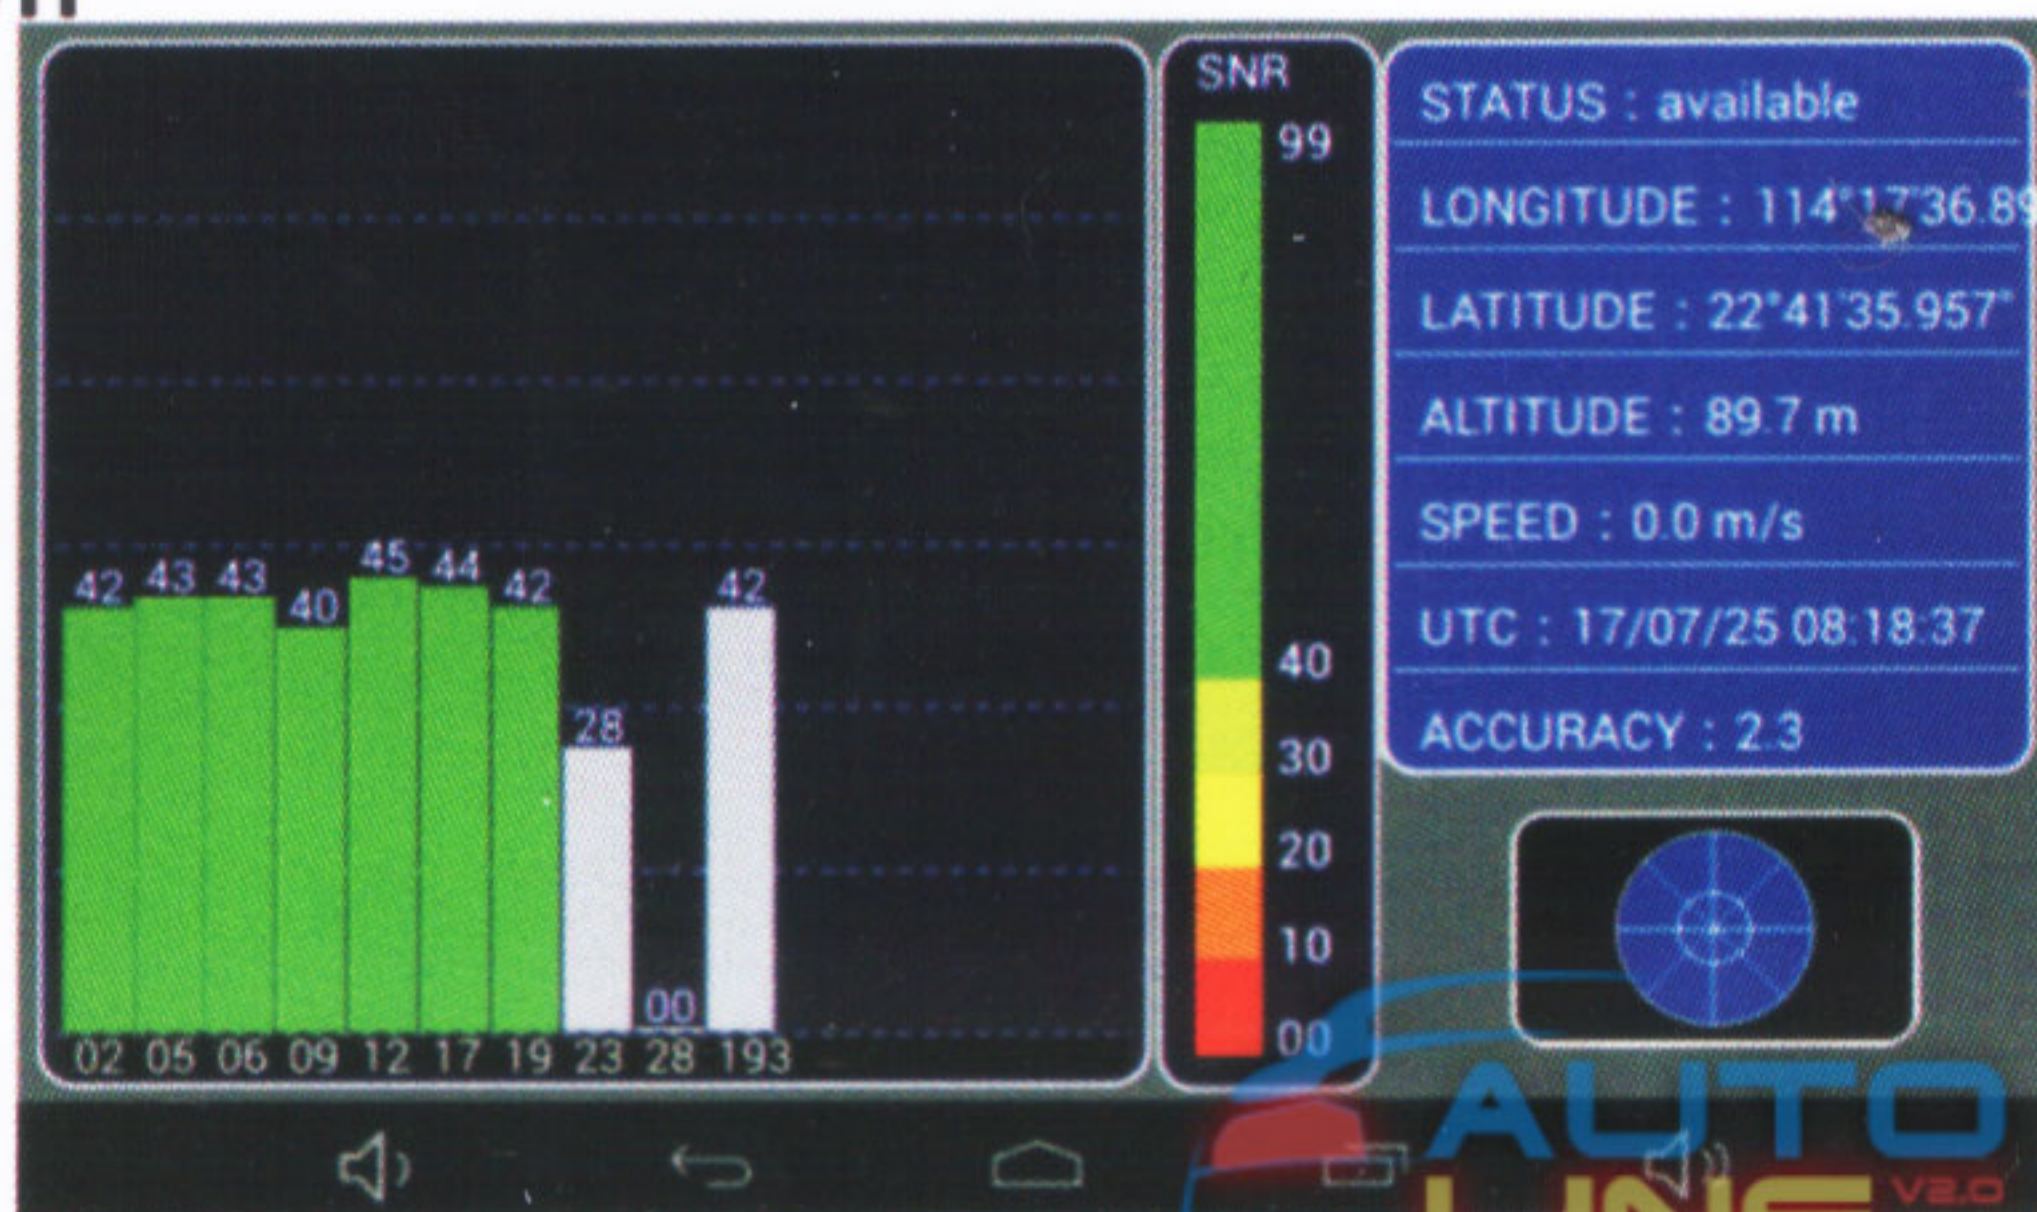

FM Transmitter

Turn on your car's radio and select a station that has little or no signal reception,

 Then tick "Use FM" to enable FM transmitter function. Program frequencies Set your transmitter to the matching station on your car's radio.

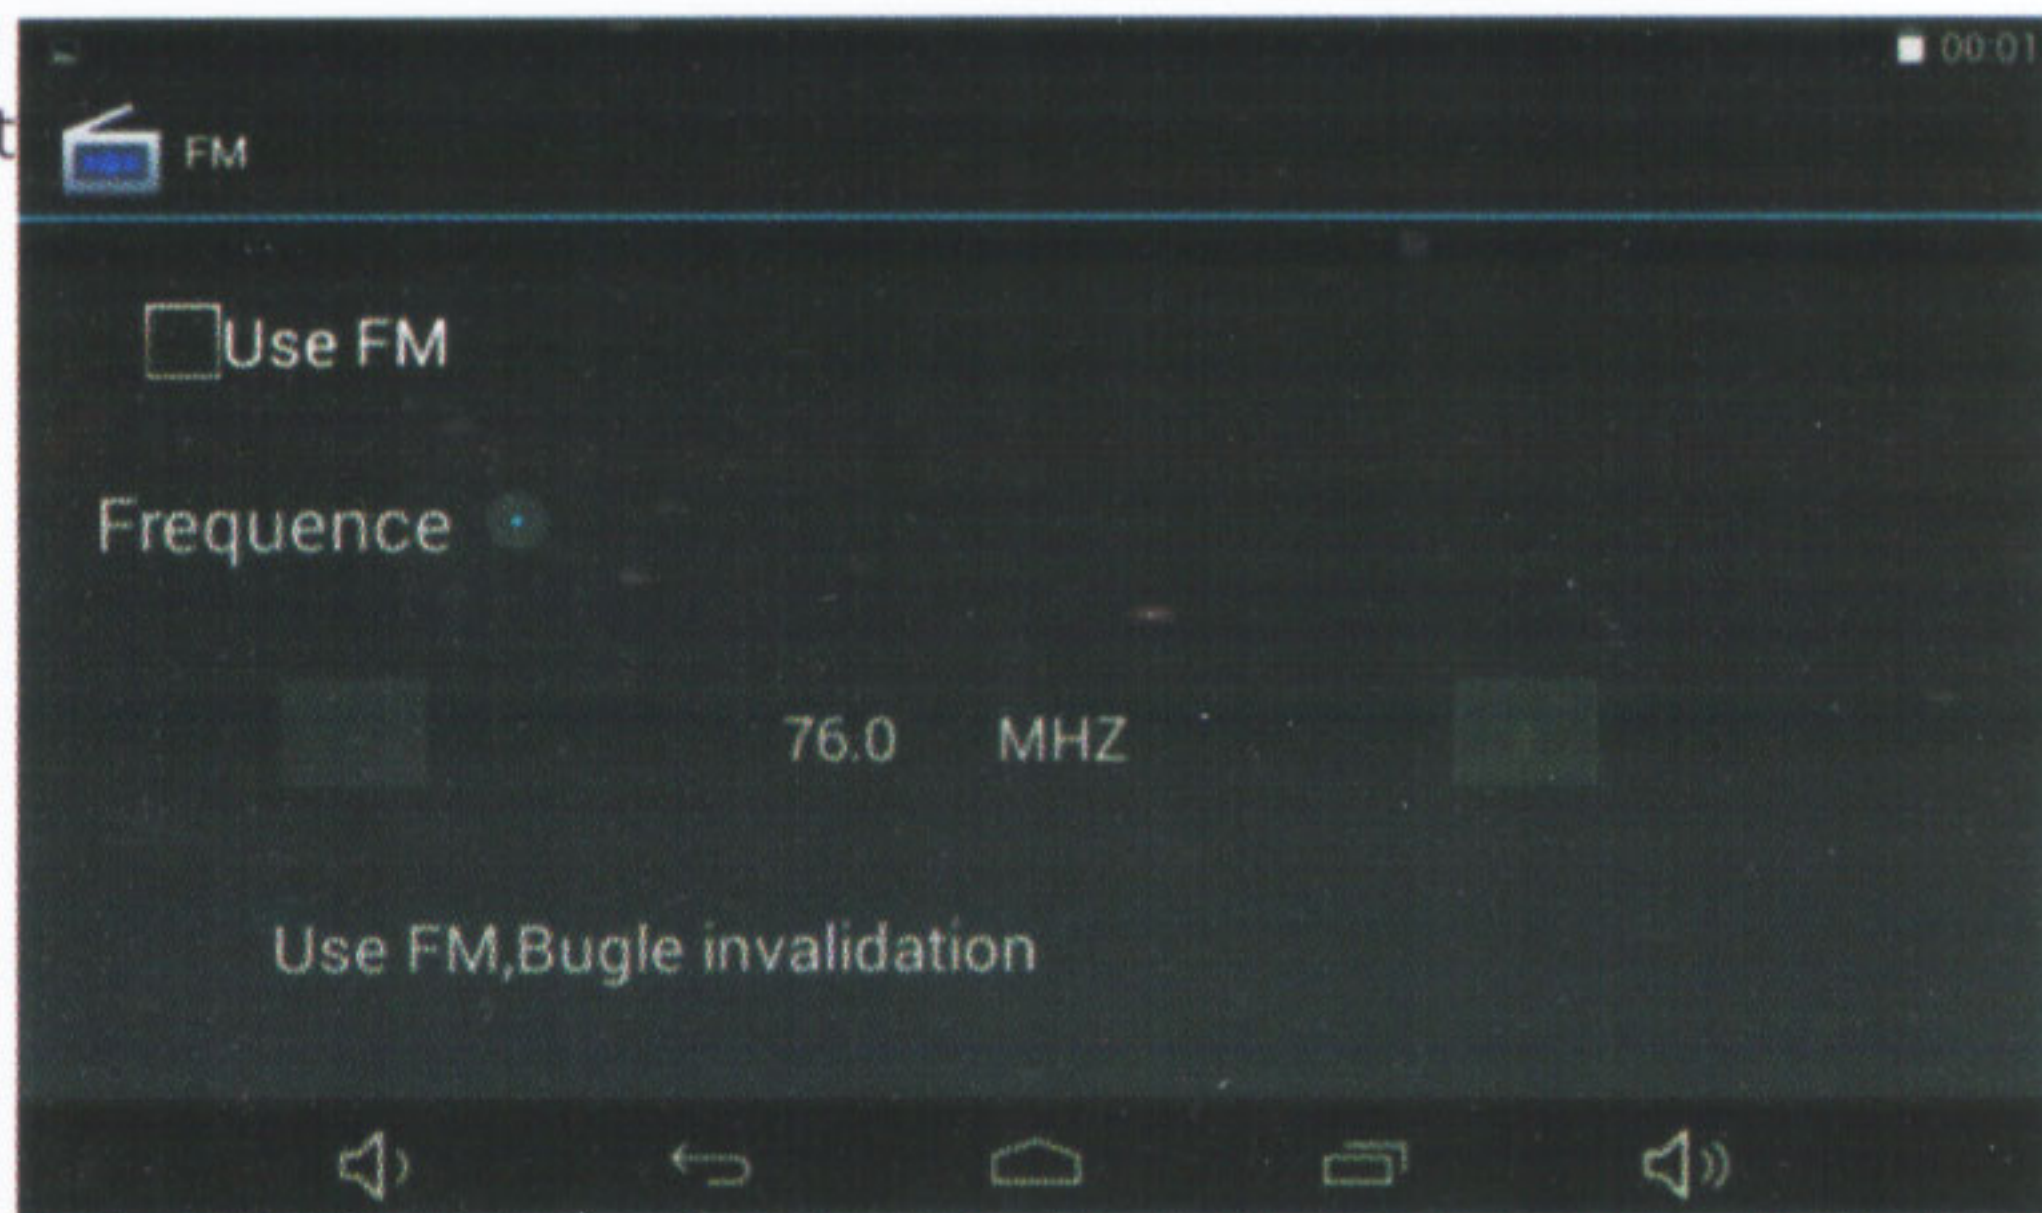

Turn on your MP3 player or other device and play a song. Turn the volume to half and raise the car's radio to the desired listening level.

 
** If FM Transmitter is on, the GPS devices will be no sound.*

To let FM transmitter works, the GPS need connect to car charger.

Connection to a PC

Connecting the device to a PC, it will be used as a USB storage device.

Tap "Turn on USB storage" at the right corner to enable the USB storage function. The PC will then display two more disk drives. The first is the storage of the pad, and the second is a removable disk which can be opened only after a TF card has been installed.

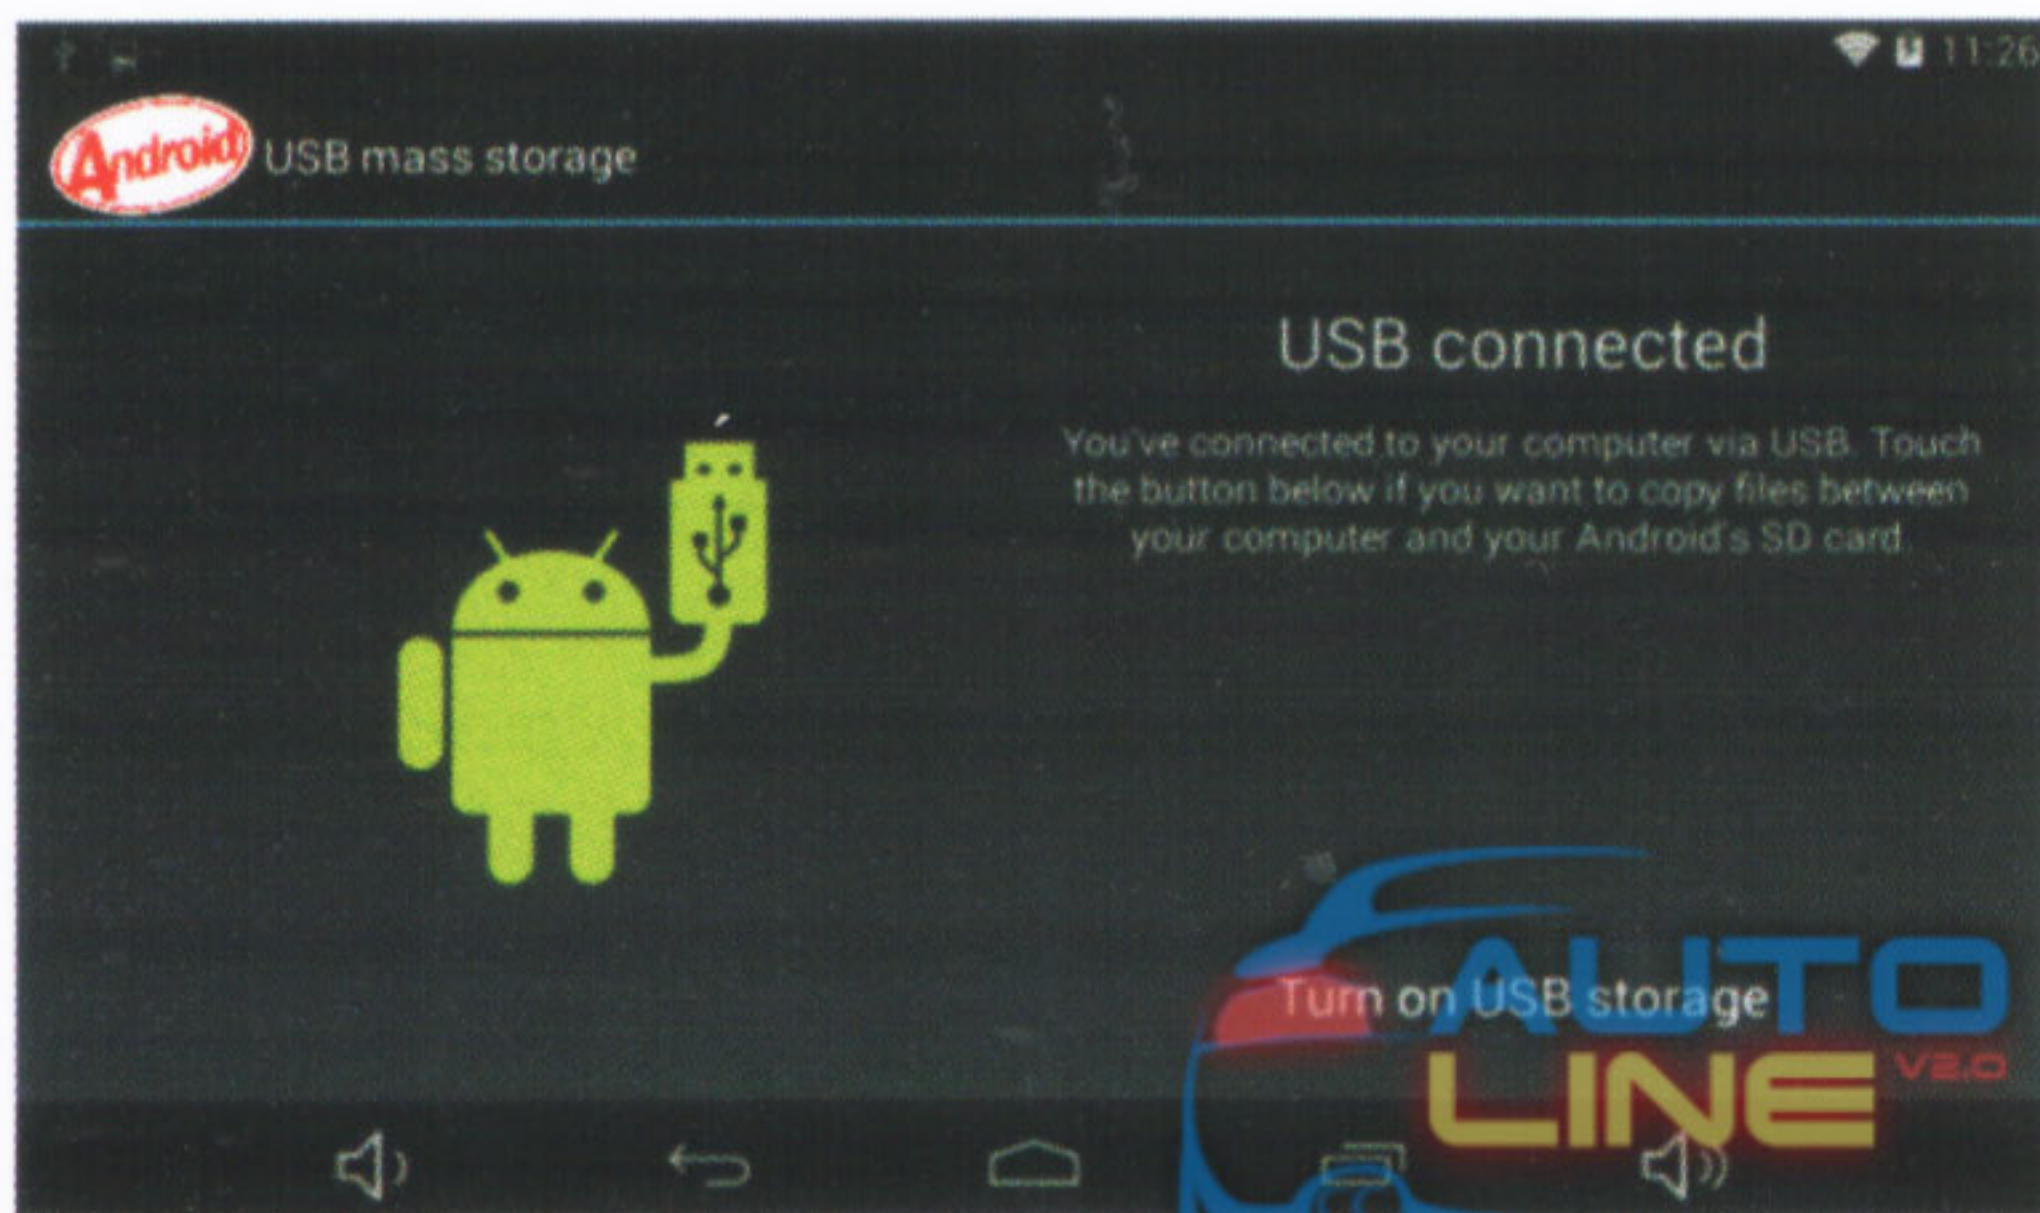

Troubleshooting

Take steps described in the tables below to solve simple problems before contacting customer service.

Immediately turn off the device and disconnect the power adapter if the device is not working properly.

Users can't turn on the unit.

- Connect the adaptor correctly.
- Use the adaptor to supply power to charge the battery.

There is no sound.

- Turn up the volume or turn on the sound output.
- Turn off FM transmitter.

The unit cannot receive satellite signals or cannot orient.

- Make sure to use the unit out of room; If in the vehicle, you can use the external GPS antenna to solve this problem

The unit can receive signals now but cannot then; signals received are not stable.

- Use the adaptor to supply power or charge the battery.
- Remove the veil.
- Avoid great swing of the unit.

Safety Instructions:

To reduce the risk of electric shock, don't remove the cover(or back).

The manufacturer should not hold responsibility for the damage caused by any substitutions and modifications of the product without authorization from the manufacturer.

To prevent fire or shock hazard, do not expose your device to rain or moisture.

Do not put, store or leave your device near heat sources, in direct strong sunlight, or in a high temperature location.

Maintain well-ventilated conditions around the unit to avoid overheating.

Operation temperature: -10 C to 60 C